




GOLDUNITED SDN BHD

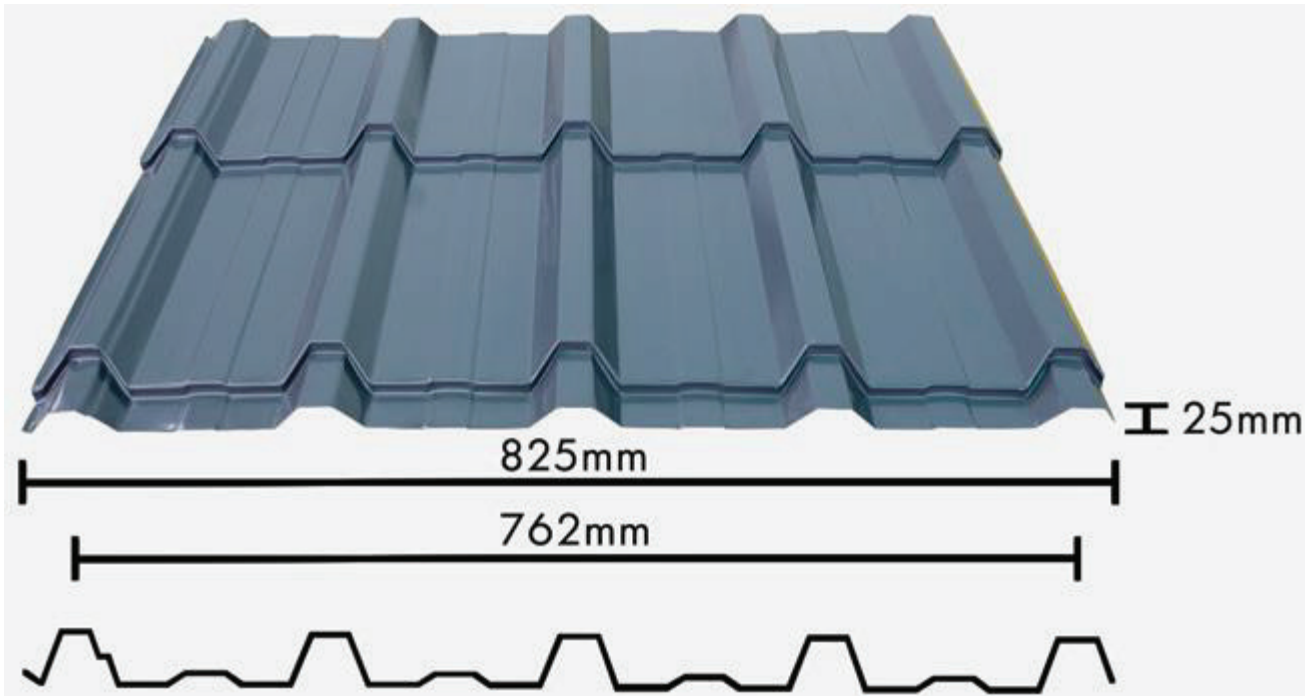

HSRM Steptile[®] Roofing




Fastener frequency and location

Diagram shows the fastener's position. At the eaves insert as shown. For the next batten which is after the eaves batten insert fastener as shown.

From this batten onwards, working upwards:

- (1) Insert a fastener at every two modules at side laps (internal span).
- (2) Insert a fastener at every two modules between side laps.
- (3) Insert a fastener at horizontal overlap.

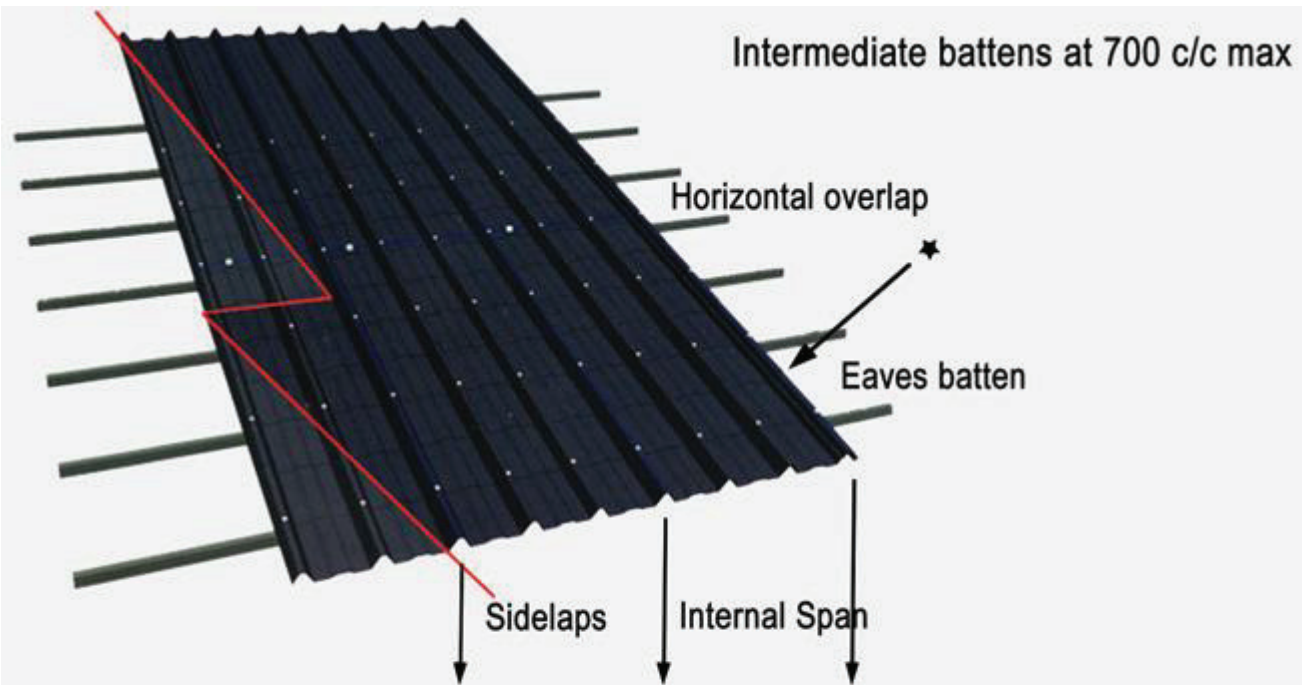

Reference

- Fastener Location
- Fastener Location (Horizontal Overlap)
- * Provide stitching fasteners where necessary